





PRE-DELIVERY CHECK LIST

INSPECTOR'S INFORMATION

Inspected By: _____ Signature: _____
 Distributor: _____ Date Installed: _____
 Customer: _____ Date Inspected: _____

I. COMPONENT INFORMATION

Hoist Model: _____
 Hoist Serial No.: _____
 Chassis VIN: _____
 Chassis Make & Model: _____ Distance from rear of cab to the centerline of rear axle/tandem.
 Chassis GVWR: _____ Distance from centerline of rear axle/tandem to rear of hoist.
 Chassis CA / CT: _____
 After Frame: _____

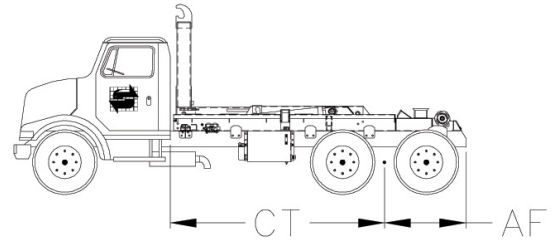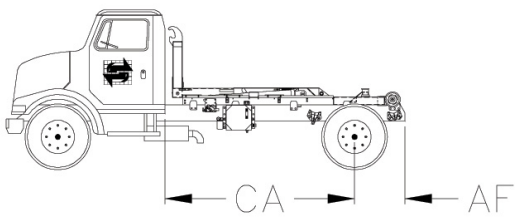

PTO Make: _____
 PTO Model: _____
 PTO Serial No.: _____
 PTO % of Engine RPM: _____
 Hyd. Pump Make: _____
 Hyd. Pump Model: _____
 Hyd. Pump Serial No.: _____

II. INSTALLATION TO CHASSIS

Were there any problems installing the hoist to the truck chassis? YES NO

If yes, please describe: _____

All bolts checked for proper tightness.

Please include photos of the hoist installed on the truck chassis.
 Be sure to include at least one photo from each side of the chassis/hoist.

III. CONTROLS

Controls easy to operate from driver's seat.

Movement of controls correct, per installation instructions.

IV. HYDRAULIC INSTALLATION

Correct hydraulic oil level in reservoir, per installation instructions.

Inspected for leaks.

Any abnormal noise during hoist operation? YES NO

If yes, please describe: _____

With engine operating @ 1,000 RPM, record the following information:

Cycle time for dump mode: _____ Seconds Up _____ Seconds Down

Cycle time for load/unload mode: _____ Seconds to Unload _____ Seconds to Load

Filter pressure: _____ PSI

Main pressure, controls in neutral: _____ PSI

Main relief pressure when extending
jib cylinder (bottomed out): _____ PSI

Main relief pressure when extending
lift cylinders (bottomed out): _____ PSI

NOTE: Connect pressure gauge to fitting provided on the inlet section of the Hydraulic Control Valve (Ref. Part No. 10P37, fitting on Hydraulic Pump Circuit Drawing found in the Parts List section of the Hoist's Parts & Operations Manual).

V. OPERATION

Jib operates freely in both directions.

Jib cannot be extended or retracted when raised in dump position or when pivot joint is tilted in unload position. Both safety hooks are fully engaged when jib is extended.

Parts & Operations Manual is in the cab.

Lubricate sliding jib and all grease zerks per installation instructions.

VI. DECALS

All safety decals and product decals installed per enclosed decal drawings (found attached to the inside of the hoist's Parts & Operations Manual cover or at the back of the Parts List section in the Manual).

Additional Comments: _____

**COMPLETE & SAVE TO YOUR COMPUTER. RETAIN A COPY FOR YOUR FILES.
ONCE COMPLETE, FAX (515-313-4426) OR EMAIL (sales@swaploader.net) A COPY BACK TO SWAPLOADER!**